

5. Under power indication

When the battery symbol on the screen blink, it means under power

*When power off, even emergency key lost, please use the outer battery box to connect to the safe

6. Date/week/time setting

Press "0*" (0 and *), when the display lighting on, please input the year, month, day, time, week, the display will light off in few seconds when finish inputting, it means setting successfully

7. Open record audit

1) Use the correct password to open the door, when the "OPEN" on the display disappears, press "0" key, the screen will show a date for opening record.


If shows PASS1, it means the door opened by the user password

If shows PASS2, it means the door opened by the master password

User Manuals

1. Digital Keypad

1. The main lock
2. The emergency lock
3. Liquid crystal display
4. Key board
5. Insertion for the outer battery box
6. Battery box

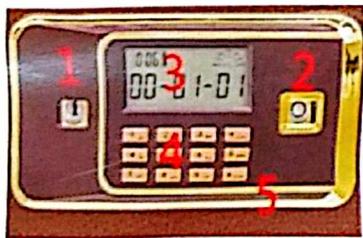

3. Usage

1. First opening of the safe

Use the master key and emergency key to open it
Or use master key and factory password to open it

2. Battery-4 pieces of 4AA alkaline batteries




3. Set up password, the button like this

① **User password setting:** press the button, then input user password, and press "#" to confirm, when show "INTO", the user password input successfully.

② **Master password setting:** original master password is 123456.

Press "#" and two "00", then press the button, and then input new master code and "#" to confirm, when show "INTO", the master code input successfully

2. Accessories

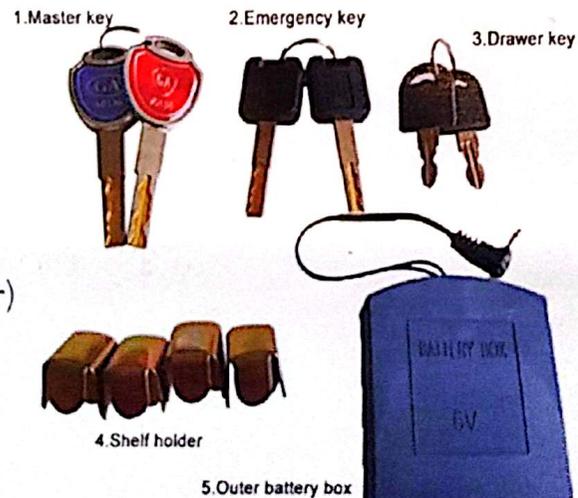

1. Master key
2. Emergency key
3. Drawer key
(if the safes have drawer)
4. Shelf holder
5. Outer battery box

4. Alarm function

① When password input wrong 3 times, the alarm warning, when password input right, the warning stop

② Anti-hitting warning, press "0", when the safe got hitting, the alarm warning, when password input right, the warning stop